



REVISIONS			
REV	DESCRIPTION	DATE	APPROVED
-	INITIAL RELEASE		

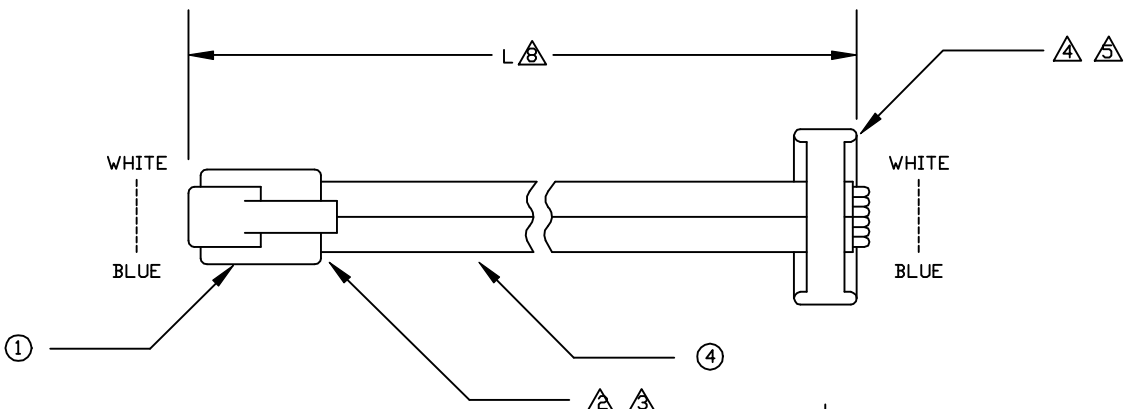

DASH NO.	L
-1	30ft +1ft -0ft
-2	6in ±1in

1	1	ID-LPT-10	PULL TAB	-	⑤	1-6B
1	1	⚠	6 WIRE FLAT MODULAR CABLE	⚠	-	④ 1-5C
1	1	050-000-010	STRAIN RELIEF	-	③	1-6B
1	1	050-010-455A	050 LAT-CON SOCKETS	-	②	1-6A
1	1	641337 (AMP)	6 PIN MODULAR JACK	-	①	1-8C
-2	-1	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	MAT'L SPEC/ DESCRIPTION	ITEM NO.	ZONE

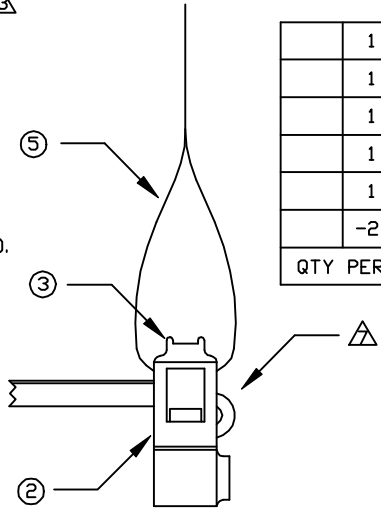

- NOTES:
- ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE NOTED.
 - ⚠ STRIP OUTER JACKET 7/32" FROM END, THIS END ONLY.
 - ⚠ ASSEMBLE WITH CABLE RIDGE AND CONNECTOR TANG UP, USING WIRE COLOR ORIENTATION SHOWN.
 - ⚠ STRIP OUTER JACKET 3/8" FROM END, THIS END ONLY.
 - ⚠ ASSEMBLE WITH CABLE RIDGE UP AND SOCKET DOWN, USING WIRE COLOR ORIENTATION SHOWN.
 - ⚠ USE GENERIC, BLACK, 6 WIRE, FLAT MODULAR CABLE. AN EXAMPLE PART NUM FROM DIGI-KEY: H0062
 - ⚠ WIRE IS FIRST CRIMPED INTO PINS, THEN FOLDED OVER AND JACKETED CABLE IS CLAMPED UNDER ③.
 - ⚠ REFER TO DASH NO. TABLE FOR REQUIRED LENGTH.

TITLE: CABLE ASSY, MODULAR CORD, FEMALE IDC-TO-MALE MODULAR JACK.

MAT'L: N/A	MODEL:	DRAWN: J Rauch
TOLERANCES: (UNLESS OTHERWISE NOTED)		DATE: 09-02-94
N/A		SCALE: 2/1 AND NOTED DWG SIZE: B
DWG NO: 5561		REV:
SHEET 1 OF 1		

JR3 INC. WOODLAND, CA 95776